

Envistar Compact

Motströmskoppling

Batteriet ska kopplas **motströms**: framledning varmvatten (IN) mot tilluftsidan, returledning (OUT) mot utluftsidan. Anliggningsgivaren ska monteras på kallaste punkten enligt bild.

Counterflow operation

The battery should be connected for **counterflow** operation: hot water (IN) connected at leaving air side, return line (OUT) connected at the entering air side. The clamp on detector should be mounted at the coldest spot according to picture.

