

Disable of ThermoCooler HP interval cycle of four way valve.

1. Press the circle button.
2. Press ↑ once, "Service" shall be highlighted.
3. Press enter once.
4. Enter code **8080**, press ↓ twice, press enter twice, press ↓ twice, press enter twice.
5. Press ↓ four times, "E. Unit Config" shall be highlighted.
6. Press enter.
7. Press ↓ five times, image below shall be displayed.
8. Press enter, "1" starts to flash.
9. Press ↓ once, "Enable cycle4wVlv : 0" shall now be displayed.
10. Press enter once. "Enable cycle4wVlv : 0" shall now be displayed without flashing.
11. Press back arrow twice.
12. Information: the service code will automatically change back to 0000.
13. Email to Par.Borglund@ivprodukt.se and report the units order number.

