
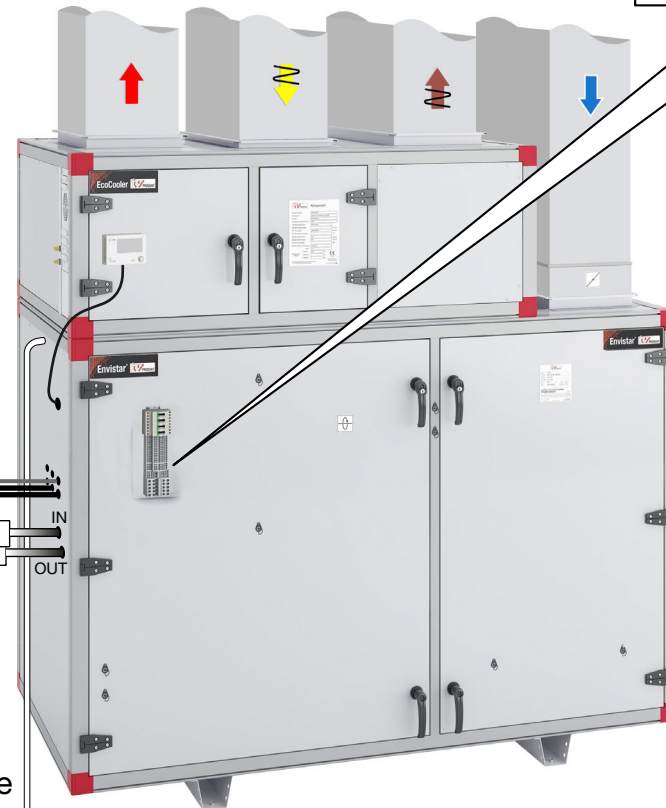
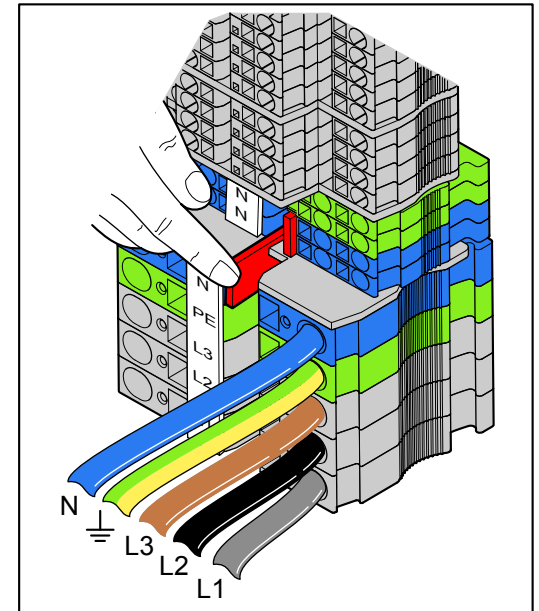
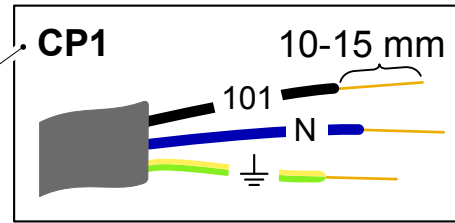
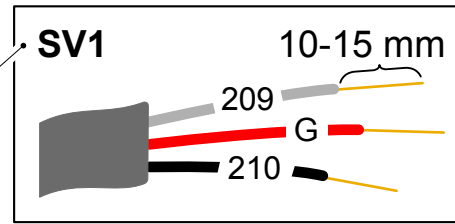


Envistar Top

connection overview

AHU with Cooling unit and Water heating

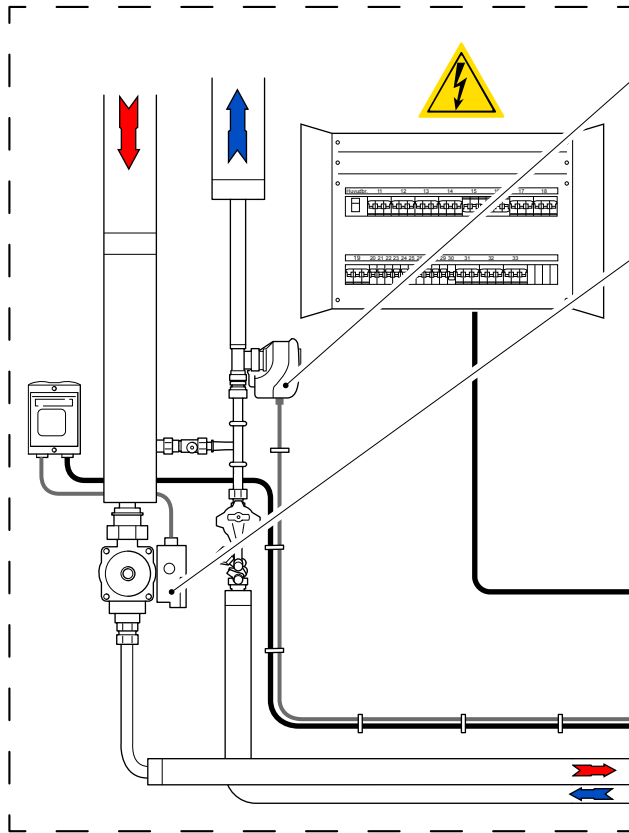

- Check that the:
- jumper is fixed in its position
 - neutral wire [N] is connected

Cooler condensate drain